

#### TV-22 Dry Vacuum System

2023 USER MANUAL/Installation Instructions



1953 W. Gulf To Lake Hwy, Lecanto, FL 34461

Phone: 352-527-1975 FAX: 352-513-4801

#### TABLE OF CONTENTS

Cover	1
Congratulations ————————————————————————————————————	2
Customer support ————————————————————————————————————	3
Warranty Policy	4
Safety —	5
What's Included	6
Specifications	7
-Site requirements	7
-Product Specifications ————————————————————————————————————	
-Tank Specifications	8
-Chassis Specifications ————————————————————————————————————	9
System Layout	10
Installation ————————————————————————————————————	11
Operation ————————————————————————————————————	14
Maintenance	15
Troubleshooting ————————————————————————————————————	16
Accessories ————————————————————————————————————	17

# Congratulations!

On the Purchase of your TRU-VAC Dual Dry Vacuum System. This state of the art dry vacuum is a very powerful, high volume, efficient system. 230 volt motors provide the HP necessary to handle high demands while maintaining multiple operatories. Equipped with a Vortex Action Separator(VAS) Tank, your TRU-VAC dry vacuum system will ensure efficiency and reliability.

#### We are certain you will love your new product!

If you are not satisfied 100% with this products please reach out and let us know, we are successful because of your FEEDBACK!

352-527-1975

Email: sierradentalequipment@outlook.com

#### **CUSTOMER SUPPORT**

"We are happy to help you with any questions or concerns you may have about your equipment"

Contact Us at 352-527-1975.

We're here to help!

sierradentalequipment@outlook.com

DentalVacuums.com



on social media!

Sierra Dental Equipment Inc. 1953 W. Gulf to Lake Hwy Lecanto, FL 34461

## WARRANTY POLICY



#### Sierra Dental Equipment Limited Warranty

Warranty for the TRU-VAC Dry Vacuum System is limited to the original purchaser of the unit. Sierra Dental Equipment is only obligated under this warranty to the repair or replacement of defective parts or materials. The defect(s) must be reported to Sierra Dental Equipment within the valid warranty period.

Sierra Dental Equipment will examine the product to determine if the parts are defective. Equipment that has been abused, neglected, or damaged by being improperly installed/maintained are not covered by this warranty. We are not responsible for work performed on the unit by any unauthorized service agents.

#### Warranty Period

Warranty is valid only with the return of the warranty card within 30 days of purchase for a period of 10 years.

#### Warranty Service and Return Policy

To obtain warranty service, product must be returned to Sierra Dental Equipment for examination at the purchaser's expense. All returns must be authorized, and a return material authorization (RMA#) number must be obtained from Sierra Dental Equipment. Returned units must be properly packaged for shipping. We are not responsible for shipping damages or shipping charges. Sierra Dental Equipment will, at their discretion, repair or replace defective parts.\*\*PLEASE NOTE\*\* there is a 25% re-stocking fee on all returns.

#### SAFETY

Use of the TRU-VAC not in compliance with the instructions specified in this manual may result in permanent failure/voided warranty of the unit.

#### WARNING

To prevent fire or electrical shock, do not expose this unit to rain or moisture, excessive heat or improper ventilation.

#### ATTENTION USERS



Alerts users of important operating and maintenance instructions. Read carefully to avoid any problems



Warns users of a potentially hot surface, and a danger of burns



Warns users that uninsulated voltage is present and can cause electric shock

#### WHAT'S INCLUDED

- (X2) 90 Degree Elbow (1 ½" Female Slip x 1 ½" Male Thread DWV)
- (X1) 90 Degree Elbow (1 ½" Female Thread x 1 ½" Male Thread DWV)
- (X1) 90 Degree Elbow (1 ½" Female Thread x 1 ½" Male Slip DWV)
- (X1) 90 Degree Elbow DWV (1 ½")
- (X2) Black Fiberglass Reinforced nipple (1 ½" Male Thread x 1 ½" Barbed)
- (X2) Stainless Steel Hose Clamps (1 13/16" 2 <sup>3</sup>/<sub>4</sub>")
- (X1) Vacuum Flex Hose (1 ½" dia. x 5' Length)
- (X2) Low Voltage Controller (24 Volt, Remote Capability)
- (X4) PVC (1.5" × 2")
- (X1) Sanitary tee DWV (1.5")
- (X1) 1.5" female adapter
- (X2) 1.5" filter housing with 10-micron filter element
- (X2) 1.5" intake tees with vacuum relief valves
- (X2) One way swing check valve (1 ½" Slip)
- (X1) VAS Collection Tank (12 Gallon, 1 ½" Female Slip connections)
- (X2) tank stacking hardware
- (X1) PVC (1 ½" x 18")
- (X2) Motor Assembly (1.7 HP, 1 ½" PVC inlet. 2" fpt Outlet "Exhaust")
- (X2) 1.25" x 2" reducer bushing galvanized
- (X2) 1.25" x closed metal nipple
- (X1) TV-22 USER MANUAL
- (X1) Warranty Card (Fill Out And Return within 30 days)

# **SPECIFICATIONS**





#### SITE REQUIREMENTS

ELECTRICAL 230 V AC	DUAL (TV-22)
Maximum circuit breaker rating	15 Amp (x2)
Minimum wire size	14 Gauge
PLUMBING	DUAL (TV-22)
Minimum exhaust vent pipe	2" pipe/up to 15 feet (180 degrees F.) 3" pipe/ more than 15 feet (180 degrees F.) (DO NOT USE 90 DEGREE ELBOWS) PART# EK-TV-22 (Flexible exhaust kit)
Minimum drain line	1 ½" flex pipe 1 ½" Sch. 40 PVC

<sup>2&</sup>quot; Schedule 40 PVC is recommended for trunkline (SUCTION)

1  $\frac{1}{2}$ " branch lines. Slope towards the VAS tank ( $\frac{1}{4}$ " for every 10')

# **SPECIFICATIONS**





#### PRODUCT SPECIFICATIONS

ELECTRICAL	DUAL (TV-22)
Voltage	230 V AC
Operating load	10 Amps (x2)
Start-up load	14 Amps (x2)
Frequency	60 Hz
VAS (TANK)	DUAL (TV-22)
Max operators	12 Users
Capacity	12 Gallons
CLIMATE REQUIREMENTS	ACCEPTABLE PARAMETERS
Ambient temp	41° - 104° F
Max operating temp	214° F
Storage temp	0° - 150° F
Relative humidity	90 % (No humidity)

# **SPECIFICATIONS**

# INDIVIDUAL CHASSIS SPECIFICATIONS (X2 CHASSIS INCLUDED)

CHASSIS	Weight	Length	Width	Height
TV-22	94 lbs.	20 ½"	20 1/4"	19 ½"


#### TANK SPECIFICATIONS

TANK	Weight	Length	Width	Height	Capacity
V.A.S.	43 lbs.	15"	17"	40"	12 Gal.



# SYSTEM LAYOUT



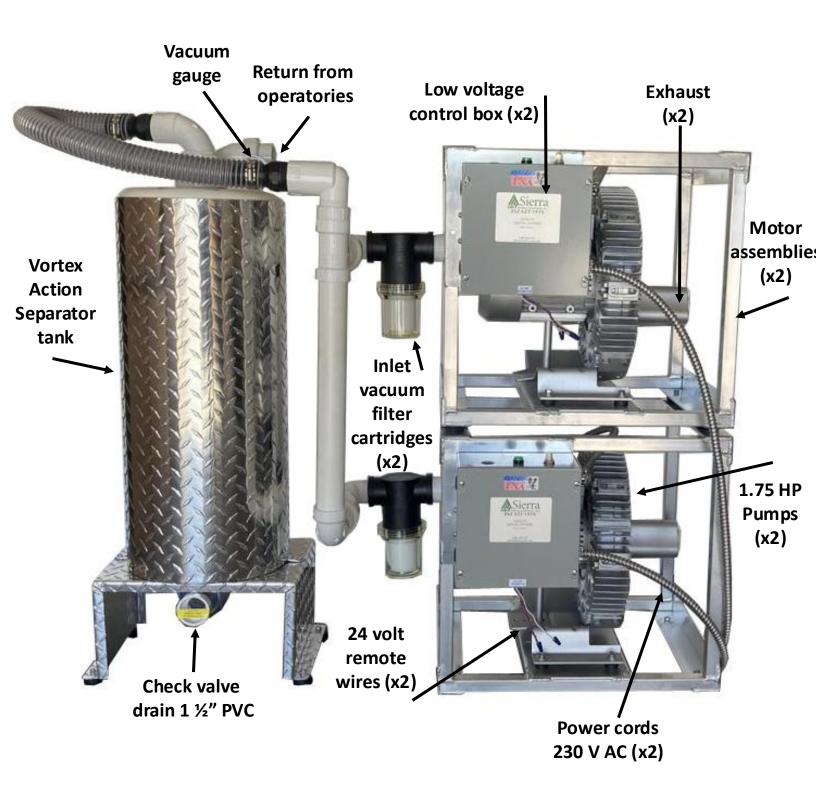

## INSTALLATION

#### Tank placement is all according to your specific location requirements.

- -You can place your (VAS) tank beside the motor assembly
- -You can stack the tank on top of the chassis

The VAS tank can be installed in an alternate area of the practice if necessary.

- 1. Find a location that fits the required site specification.
- 2. Wherever you plan to mount motor assembly, be sure that the 230 volt power source is readily available for each motor.
- 3. Place your motor assemblies on the ground, if the (VAS) tank is going to be mounted on top of the motor chassis do so now. Align the 2 holes on tank base to the 2 holes on motor chassis and secure with included hardware
- 4. Run PVC/Flex Pipe from the top of the tank into the motor inlet. There are two connections on the on the top of the tank so be sure to connect to the one in front. The front of the tank is the side with the drain sticking outward.
- 5. Connect proper drain to the bottom of the tank and route this to the sewer. Assure that the tank drain is at a higher elevation than the sewer inlet to allow the tank to drain properly. (1 ½" Schedule 40 PVC is recommended)

We highly recommend installing a ball valve on the drain for easier cleaning/soaking of the inside of the tank (required annually)



# **INSTALLATION**



6. Connect the pre-existing operatory lines the fitting on the top of the tank. There are two connections on the on the top of the tank so be sure to connect to the one in back. The front of the tank is the side with the drain sticking outward.

We provide a 2" FPT steel exhaust fitting. Route exhaust with this same material or similar high temp flex pipe to an outside vent. DO NOT USE 90° FITTINGS. 45° FITTING REQUIRED. See pg. 7

7. Routing the exhaust to an outside vent is required and very important, this reduces the heat significantly. This will ensure that any odor will leave the building. Wherever the exhaust leaves the building assure that outside elements such as rain/snow or foreign objects cannot make its way into the exhaust. This could potentially cause harm to the motor. The easier the exhaust can flow out of the motor with minimum restriction, the cooler the system will run. This will prolong the life of the motor. Keep in mind when routing the exhaust, excessive length and multiple turns will create more restriction.



# INSTALLATION



8. Route and connect the motor assembly power cord to a \*230 volt source. Maximum circuit breaker rating: 15 AMPS per motor. \*Box supplied by customer.

Green = Ground Blue = L1 Red = L2

\*Connections are to be made by a certified electrician\*

9. (Optional) On the underside of the low voltage controller you will find three remote wires. Route these wires to a location where you will be mounting the remote operation switch panel to control the system.

Red = 28 Volt power

Blue = Return


White = Illumination (lamp)



# **OPERATION**



You will turn the unit on and off from your remote switch.

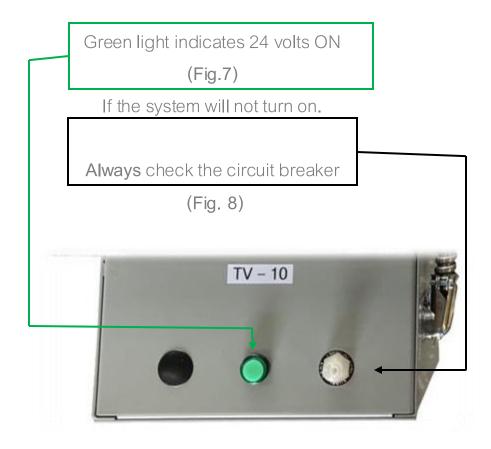



#### **MAINTENANCE**





\*ALWAYS make sure that your filter is WHITE & CLEAN, a bi weekly check for discoloration and moisture is highly recommended. These filters are not reusable, do not attempt to clean or alter the filter in any way. Dirty filters should always be replaced every 3-6 months

Part No. RMC-10 New filters can be purchased through Sierra Dental or your dealer only.

(Contact us via phone, email, or visit us on the web)

Other than filter replacement, your new TRU-VAC has a separation tank that should be inspected/cleaned annually to confirm operation of the float mechanism.

Your TRU-VAC should be mounted in a clean environment, dust and debris can potentially harm your unit and cause malfunction not covered under warranty. (The Vacuum relief valve pulls air from the environment, so dust and debris can freely enter the motor if it is mounted incorrectly.)

#### A DO NOT ATTEMPT TO ADJUST THE VACUUM RELIEF VALVE

The vacuum relief valve is a preset part @ 8" HG, Sierra Dental Equipment Inc. has set the standard for this valve according to many variables. Adjusting the vacuum relief valve, will void your warranty.

#### ♠ DO NOT INSTALL WITHOUT THERMAL MANAGEMENT 5000+ Btu's per hour

Intermittently check your drain connection on the bottom of the (VAS) tank to ensure that it is dry and not leaking.



# TROUBLESHOOTING



ISSUE	ISSUE POSSIBLE CAUSE POSSIBLE SO	
No suction	<ul> <li>a) Pump not turned on</li> <li>b) Pump not running</li> <li>c) VAS tank is full</li> <li>d) Drain check valve clogged</li> <li>e) Kinked or collapsed hose</li> </ul>	<ul> <li>a) Turn pump on</li> <li>b) Contact Sierra Dental</li> <li>c) Shut unit off for 20 seconds then turn unit back on</li> <li>d) Contact Sierra Dental</li> <li>e) Call your local plumber</li> <li>f) Call Sierra Dental</li> </ul>
Poor or low suction	a) Restricted air exhaust b) Restricted air suction	<ul> <li>a) Ensure that exhaust is ran according to installation procedure, call Sierra         Dental     </li> <li>b) Dirty filter, Contact Sierra         Dental     </li> </ul>
Pump does not run	<ul> <li>a) 230 V circuit breaker is OFF</li> <li>b) Remote switch is OFF or not correctly connected</li> <li>c) Electrical issue</li> </ul>	<ul> <li>a) Turn the circuit breaker</li> <li>ON</li> <li>b) Make sure remote switch</li> <li>is ON, call Sierra Dental</li> <li>c) Call Sierra Dental</li> </ul>

# **ACCESSORIES**



We recommend adding the EASY Exhaust Kit to your order to make the installation easier than ever! This kit comes equipped with 5' of high temperature flexible hose and all the fittings you'll need to ensure set up is a breeze! We also have a model available for the TV-22.



We've helped doctors everywhere find their solution to amalgam in the wastewater! Want to become amalgam compliant and reduce your environmental impact? Call us to find out how we can help you with our simple and easy options. From becoming compliant all the way through the recycling process, Sierra has your back every step of the way!

Replacement filters




REPLACEMENT FILTERS – available in packs of 3. (Filters are a very important factor with your TRU-VAC.)

A dirty filter will cause loss of vacuum and motor damage. Inspecting and replacing these filters regularly ensures proper maintenance procedures and avoids down time or costly repairs.

# START UP PROCEDURE REGARDING YOUR WARRANTY



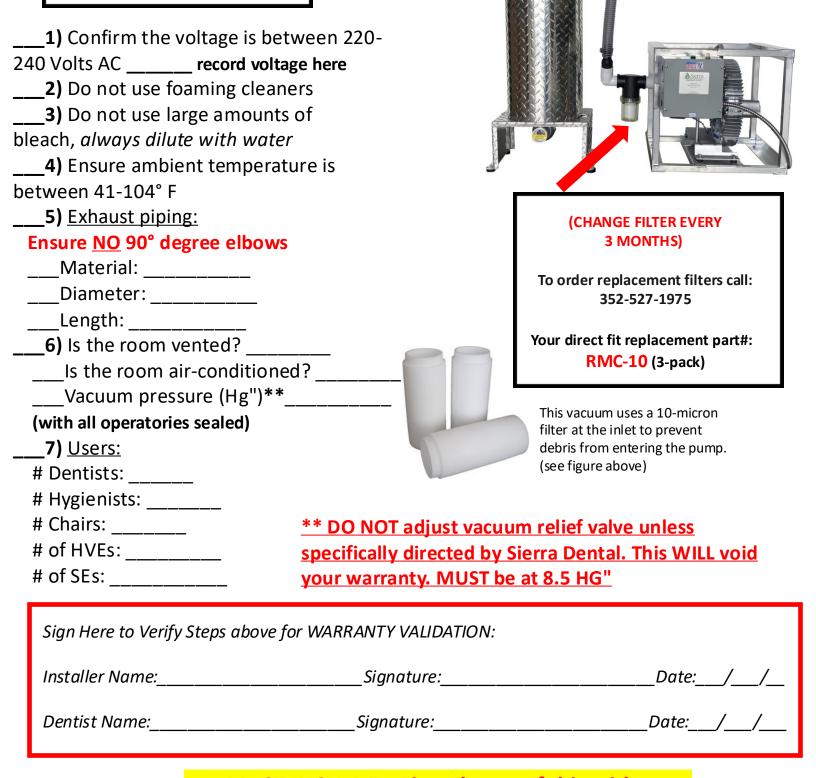

You MUST INCLUDE a <u>signed copy</u> of this with your WARRANTY CARD to validate warranty.